

This guide is for Mind Express version 4 or newer. See www.techcess.co.uk for more help sheets. Sheet reference 5.2

Occasionally, a Mind Express voice may mispronounce words. For example, unusual names of people or places.

To change the way a word is pronounced, you can add it to the Speech Dictionary. To do this, click 'Tools' on the top bar, then 'Speech dictionary' in the menu which appears. **A**

In the 'Speech dictionary' window, type the mispronounced word into the 'Word' box and the correct pronunciation in the 'New pronunciation' box. To test the pronunciation sounds OK, click the speaker button. **B**

When the pronunciation sounds right, add it to the dictionary by clicking the green '+' button near the bottom. **C**

This pronunciation will now be used anytime the word is spoken by Mind Express, no matter which document, page or cell you are on.

In this example: the Mind Express voice was pronouncing the word 'Jedi' as 'Jeedee'. I corrected the pronunciation as 'Jed die'.

